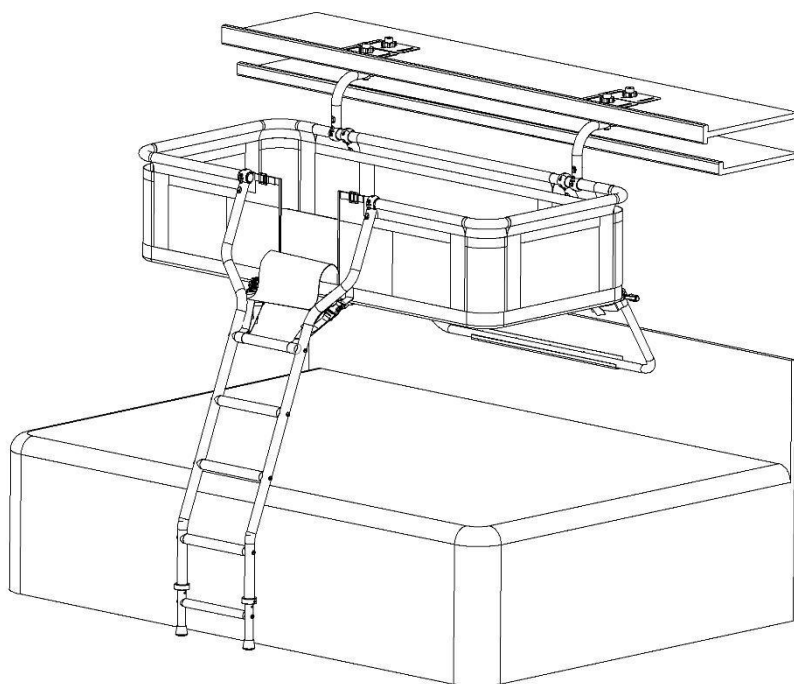


Manual



Uwis Caravanbed© V2.0

Document Revision: B



English

Page 2

Nederlands

Pagina 16

– Important –

Read very attentively and retain this document carefully.

– Product –

Model: CARAVANBED

Registered on 26-05-2014 with number 002470724-0001 on behalf of J. Wisselink Beheer BV

Producer: Uwis BV under the tradename UWIS Products. Mercatorstraat 19, 7131 PW, Lichtenvoorde, Holland.

Email: info@uwis.nl

Table of Contents

– Important –	2
– Product –	2
– Warnings –	4
Parts list	6
Assembly instructions	12
1: Assembling the stair	12
2: Slide polyester hanging bed around U-pipe	13
3: Attach T-parts and cover plugs	13
4: Assembling rear support	14
5: Assembling Cabinet connection	15
6: Determine position and drill holes	16
7: Assembling the bed and put frame on tension	17

– Warnings –

	Uwis Caravanbed is not suitable for children under six year old without supervision. Maximum weight 50 kg. Maximum length of the child: 142cm. Not suitable for more than one child at the time
Ensure at all times that your child stays in bed using the Zip-closing and only uses the staircase that is intended for this purpose to get in or out the bed.	
Uwis Caravanbed can cause a serious risk of strangulation and injury if it is not used correctly. Ensure at all time that the bed is assembled and installed as mentioned in this document.	
Uwis Products is not responsible and cannot be held liable for disfunctioning of the bed with the reason that your own caravan or camper (for example, by poor maintenance or minimal build quality) is not able to carry the bed.	
Ensure at all time and especially during installation that there is no risk of strangulation. To avoid risk of serious injury the distance between the top safety barrier of the bed and the adjacent structure may not be more than 75mm or should be greater than 230 mm.	
Do not place the bed next to cords from curtains and blinds. Also be careful with open flames or other heat sources, such as spotlights, lights, heating etc.	
Ensure at all time that all components are properly tightened. Included tensioning straps are to be placed under tension in order to ensure strength of construction.	
Use of bed and staircase must always be accompanied by an adult.	
Do not put pillows or other objects in the caravanbed that allow your child to climb out or lead to choke risks.	
Only use the supplied support for the mattress and the mattress provided by Uwis Products.	
keep loose parts away from children	



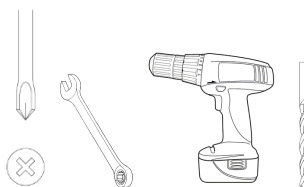
Cleaning: Wipe the bottom plate and the polyester hanging bed of the caravanbed clean with cold water in which a mild detergent is dissolved, rinse and wipe dry. Wash the mattress cover after it is zipped off separately in the machine (washing: cold easy care). Then dry in the dryer (Program: ironing moist) at up to 40 degrees.

Required tools







- Phillips screwdriver
- Wrench 13mm
- Drill with 8mm drill bit






Required tools enclosed





- Allen key 2.5
- Allen key 4
- Allen key 5










Parts list

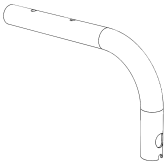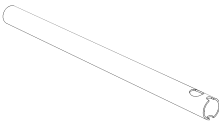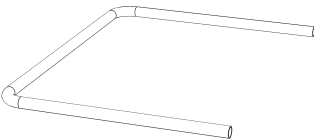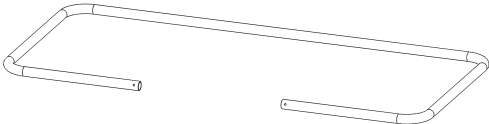No.	Part Name	Qty.
1	 Pipe_1	2
2	 Pipe_2	2
3	 Pipe_3	2
4	 Pipe_4 (U-pipe)	1
5	 Pipe_5	2
6	 Pipe_6 (C-Pipe)	1

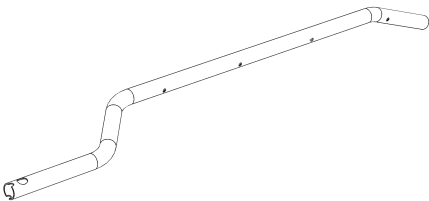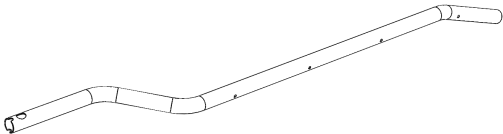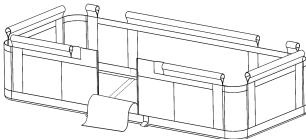7	 Pipe_7 (Stair pipe left)	1
8	 Pipe_8 (Stair pipe right)	1
9	 Pipe_9 (Stair step Ø30mm)	4
10	 Pipe_10 (Stair step floor Ø25mm)	1
11	 Support plate	1
12	 Cabinet plate	8
13	 Polyester hanging bed	1

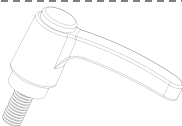14	 Matress	1
15	 Matress support	1
16	 Buckle strap 1 (male)	4
17	 T-part half	14
18	 Adjusting ring	4
19	 Clamp handle	2
20	 Pipe connector large (30mm)	8
21	 Pipe connector small (25mm)	2

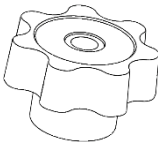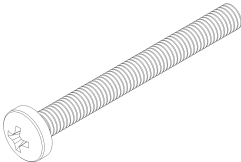
22	 Pipe ring	8
23	 Spacer	4
24	 Tightening disk	4
25	 Cover plug 30mm	6
26	 Rubber Stair feet	2
27	 Pan head cross screw m6 x 60	10

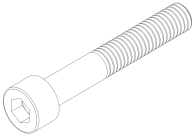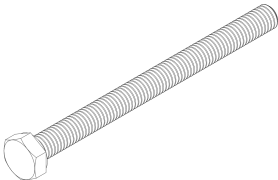28	 Head cap screw m6 x 40	2
29	 Head cap screw m3 x 10	6
30	 Hex bolt screw m8 x 100	4
31	 Socket set screw m8x10	2 + (2 spare)
32	 Chipboard screw 3,5x20	5
33	 Cap Nut m6	2
34	 Nut m3	6
35	Anti-slip tape	1x +/- 115cm


36	Sticker 1 Text: For safety fasten belt to this step and pull on tension as described in the manual	1
37	Sticker 2 Text: For safety the U-pipe needs to be under tension as described in the manual	1
38	Hex key 4	1
39	Hex key 5	1
40	Hex key 2.5	1

Assembly instructions

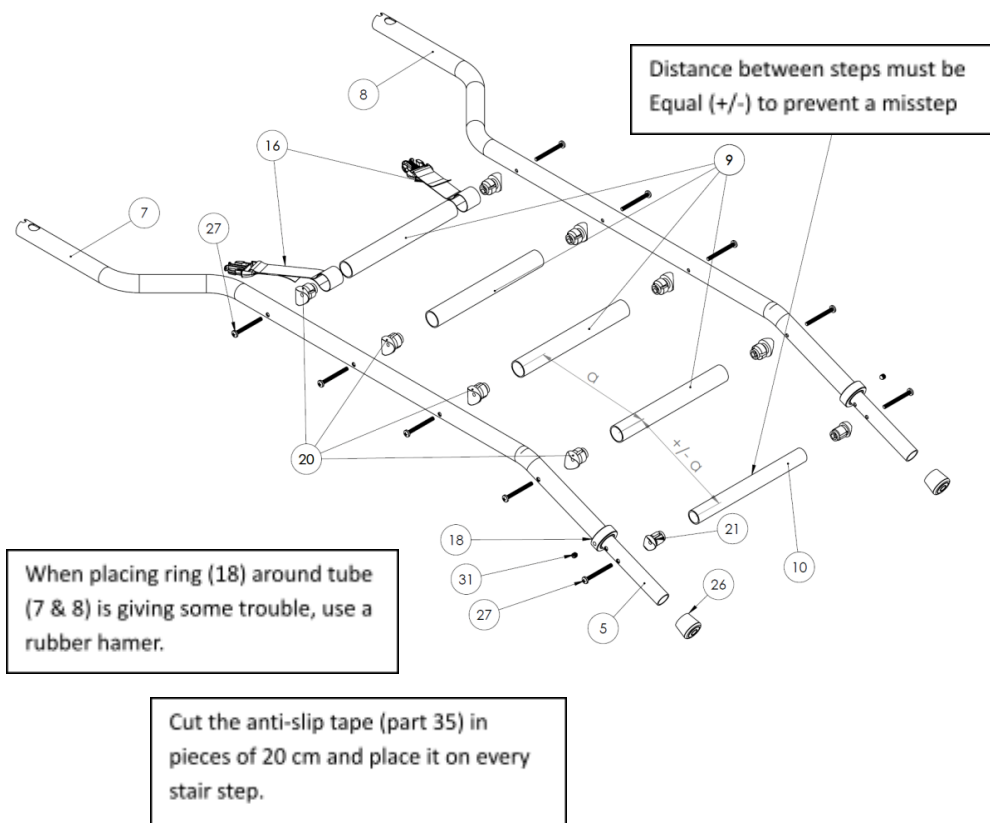
1: Assembling the stair



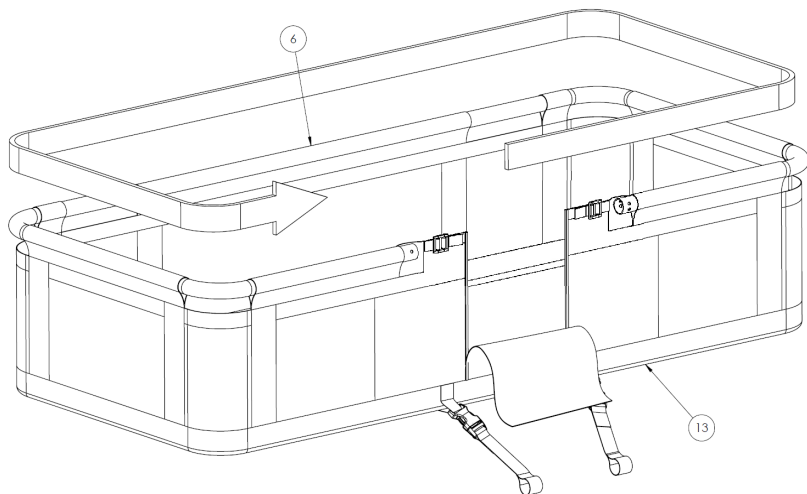
2: Slide polyester hanging bed around C-pipe with the zipper at the outside.




3: Attach T-parts and cover plugs

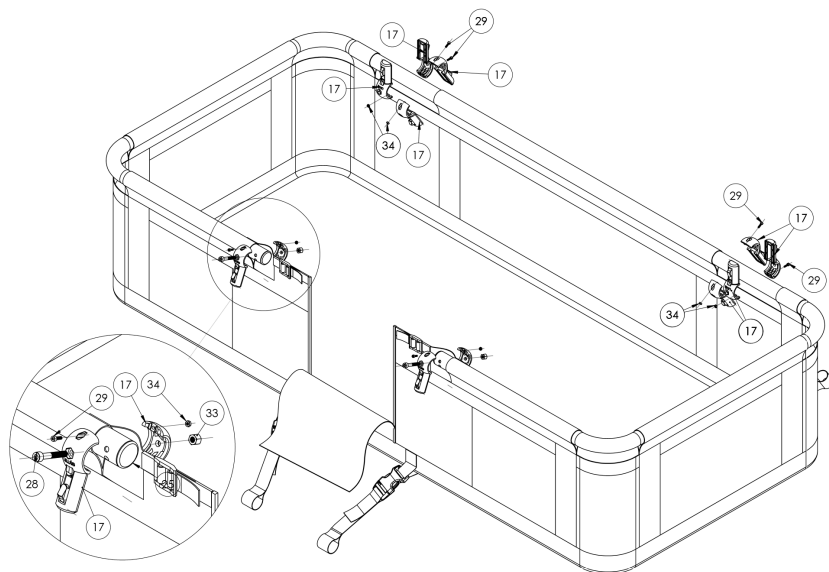

4: Assembling rear support

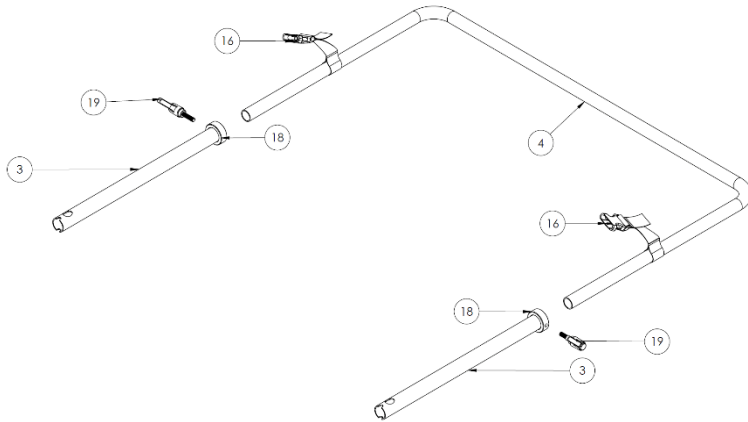



5: Assembling Cabinet connection

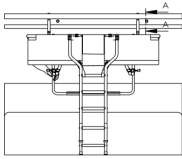


**A: Recommended
for normal and
large caravans**

**B: Recommended
for small caravans**

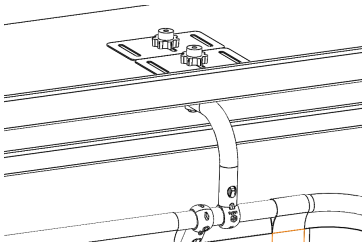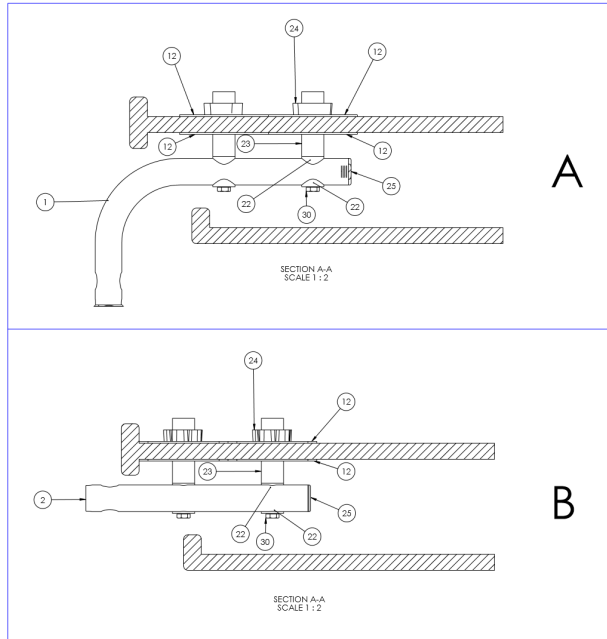*The spacer (Part nr. 23)
can be removed when not
necessary.




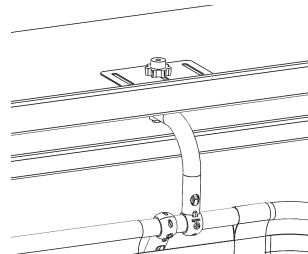Most stable solution with a double
connection.




Note: If your cabinet is not deep
enough for the double connection you
can also only use one. The Carvanbed
is tested and SGS certified also with
only 1 connection.

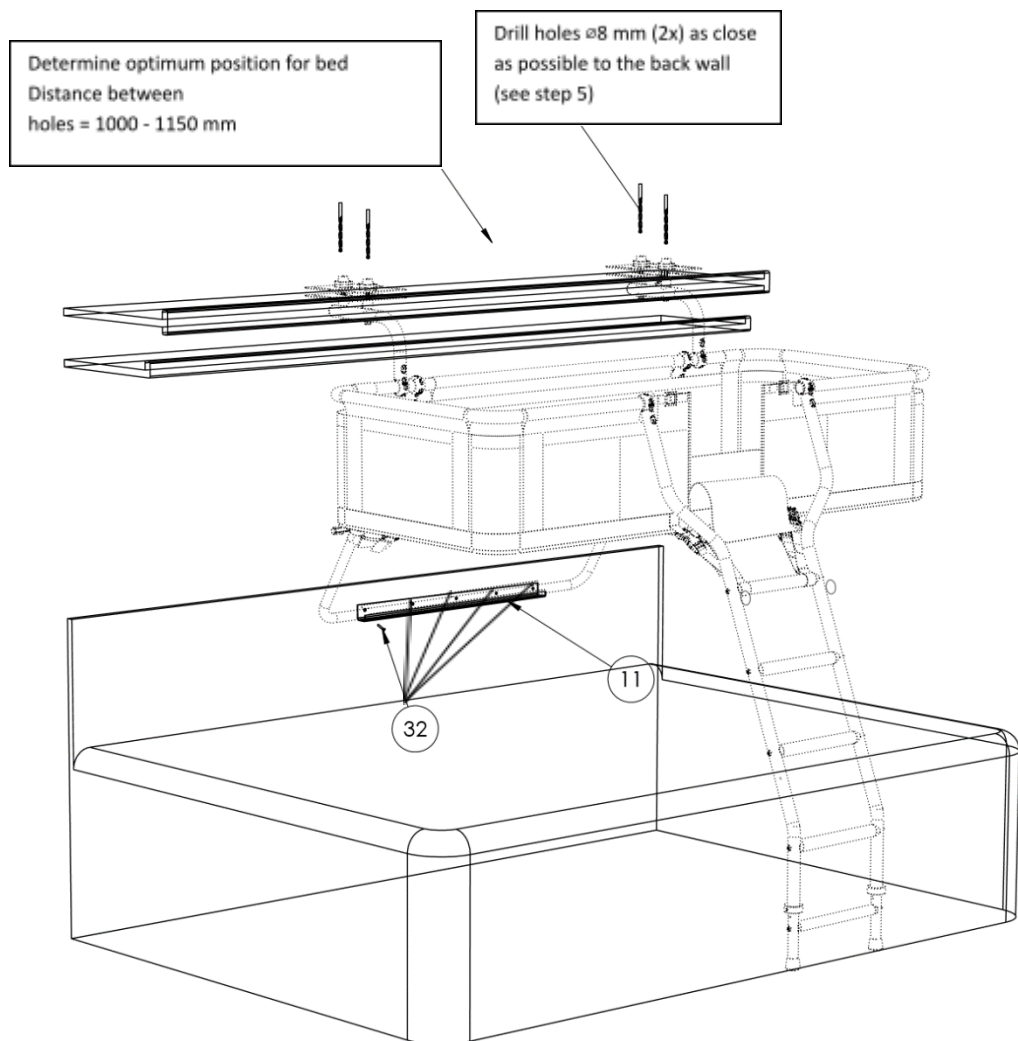6: Determine position and drill holes



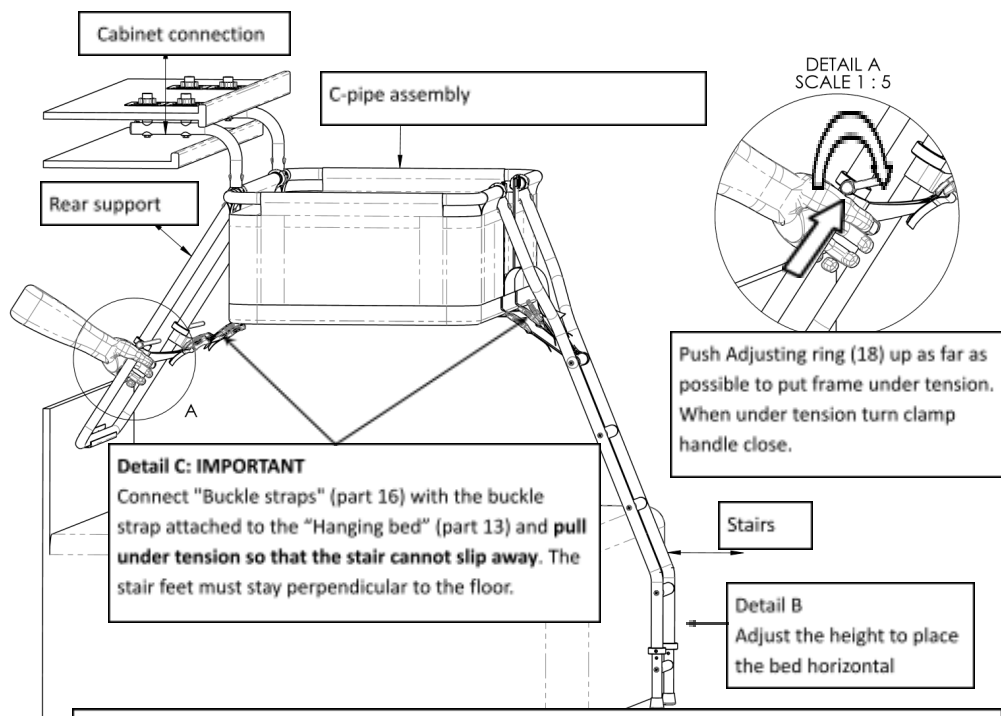7: Assembling the bed and put frame on tension



- Step 1:** Mount the "cabinet connections" into to closet of your caravan
- Step 2:** Mount the "rear support" to the "C-pipe & Hanging bed with clamp"
- Step 3:** Attach the "C-pipe assembly" to the "cabinet connections"
- Step 4:** Put the rear support on the L-profile (part nr. 11)
- Step 5:** Push on both sides the adjusting ring up as described in Detail A on this page.
- Step 6:** Attach the Stairs to the "C-Pipe assembly" (both sides at the same time)
- Step 7:** Put the "Mattress support" (part 15) in the hanging bed and the "Mattress" (part 14) on top of the "Mattress Support".
- Step 8:** Place the bed horizontal and the stair feet perpendicular to the floor. (Detail B)
- Step 9:** Connect the "Buckle Strap's" (part 16) as described in Detail C. **IMPORTANT**
- Step 10:** Place "Sticker 1" (36) on the upper staircase step.

IMPORTANT

The total weight should be distributed among the stairs and rear support, so make sure the cabinet receives no vertical force.

– Belangrijk –

Lees dit document aandachtig en bewaar het zorgvuldig.

– Product –

Model: CARAVANBED

Geregistreerd op 26-05-2014 met nummer 002470724-0001 op naam van J. Wisselink Beheer BV

Producent: Uwis BV onder de handelsnaam UWIS Products.

Mercatorstraat 19, 7131 PW, Lichtenvoorde, Nederland.

Email: info@uwis.nl

Inhoudsopgave

– Belangrijk –	18
– Product –	18
– Waarschuwingen –	20
Onderdelen lijst	22
Assemblage instructies	28
1: Assemblage van de trap	28
2: Schuif polyester hangbed om C-buis	29
3: Monteer T-verbinders and afdicht doppen	29
4: Assembleer steun achter	30
5: Assembleer kast verbinders	31
6: Bepaal positie en boor gaten	32
7: Assembleer het bed en zet op spanning.	33

– Waarschuwingen –

	Uwis Caravanbed is niet geschikt voor gebruik door kinderen jonger dan 6 jaar zonder toezicht. Het maximum gewicht is 50 KG. De maximale lengte is 142cm. Het bed is niet geschikt voor meer dan 1 kind.
Zorg ten alle tijden dat uw kind binnen in het bed blijft door middel van de ritssluiting. Laat uw kind alleen door middel van de trap het bed betreden en verlaten.	
Bij onjuist gebruik kan Uwis caravanbed verwondingen of wurging veroorzaken. Zorg ten alle tijden dat het bed precies is geassembleerd en geïnstalleerd zoals in dit document beschreven staat.	
Uwis product is niet verantwoordelijk en kan dus niet aansprakelijk worden gesteld voor het disfunctioneren van het bed met de reden dat uw caravan of camper (door bijvoorbeeld achterstallig onderhoud of minimale bouwkwaliteit) niet in staat is het bed te ondersteunen.	
Zorg ten alle tijden en vooral tijdens installatie dat er geen risico op wurging is. Om risico's op wurging te voorkomen moet de afstand tussen de omranding van het bed en de omgeving kleiner zijn dan 75mm of groter dan 230mm.	
Plaats het bed niet naast los hangende koorden en touwen van gordijnen of rolluiken. Wees ook waakzaam met hittebronnen zoals het gasfornuis en lampen.	
Zorg ten alle tijden dat alle onderdelen goed vast zitten. Dit geldt vooral voor de spanbanden, deze dienen goed aangespannen te worden om de sterkte van het bed te garanderen. .	
Bij het gebruik van het bed moet er altijd een persoons aanwezig zijn.	
Plaats geen kussen of andere objecten in het caravanbed die ervoor kunnen zorgen dat uw kind eenvoudig uit het bed kan klimmen of die voor verstikking kunnen zorgen.	
Gebruik alleen de meegeleverde matras onderlegger en matras meegeleverd door Uwis Products.	
Houd losliggende delen weg bij kinderen.	



Reiningen:

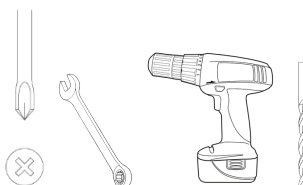
Maak de bodem van het polyester hangbed schoon met koud water waar een milde detergent in is opgelost, spoelen en droogwrijven. Was de matrashoes apart in de wasmachine. (programma: Koud) Daarna eventueel drogen in de droger. (programma: strijkdroog maximaal 40 graden)

Benodigd gereedschap





- Kruiskop schroevendraaier
- Steeksleutel 13mm
- Boormachine met 8mm boor






Benodigd gereedschap (inbegrepen)




- Inbus sleutel 2.5
- Inbus sleutel 4
- Inbus sleutel 5









Onderdelen lijst

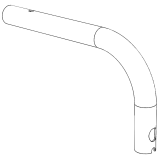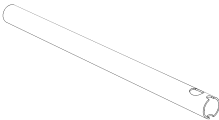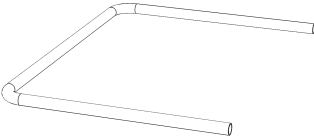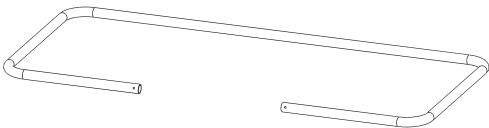Nr.	Naam	Qty.
1	 Buis_1	2
2	 Buis_2	2
3	 Buis_3	2
4	 Buis_4 (U-buis)	1
5	 Buis_5	2
6	 Buis 6 (C-Buis)	1

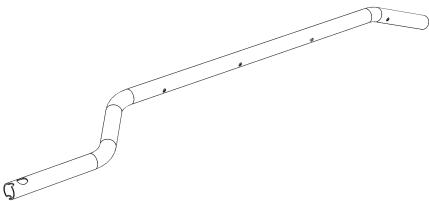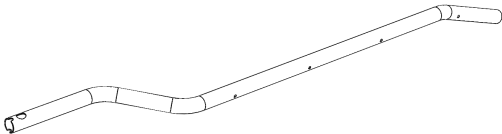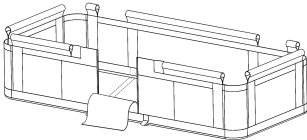7	 Buis_7 (Trap buis links)	1
8	 Buis_8 (Trap buis rechts)	1
9	 Buis_9 (Strap trede Ø30mm)	4
10	 Buis_10 (Trap trede vloer Ø25mm)	1
11	 Ondersteuning plaat	1
12	 Kast plaat	8
13	 Polyester hangbed	1

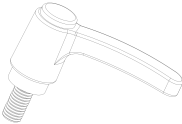14		1
15		1
16		4
17		14
18		4
19		2
20		8
21		2

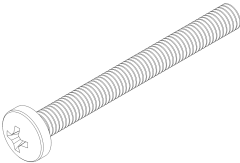
22		8
23		4
24		4
25		6
26		2
27		10
	Kruiskop bout m6 x 60	

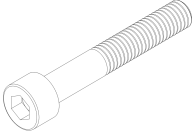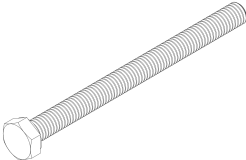28	 Inbus bout m6 x 40	2
29	 Inbus bout m3 x 10	6
30	 Zeskantbout m8 x 100	4
31	 Stelschroef m8x10	2 + (2 spare)
32	 Spaanplaat schroef 3,5x20	5
33	 dopmoer m6	2
34	 moer m3	6
35	Anti-slip tape	1x +/- 115cm
36	Sticker 1 Tekst: For safety fasten belt to this step and pull on tension as described in the manual	1


37	Sticker 2 Tekst: For safety the U-pipe needs to be under tension as described in the manual	1
38	Inbussleutel 4	1
39	Inbussleutel 5	1
40	Inbussleutel 2.5	1

Assemblage instructies

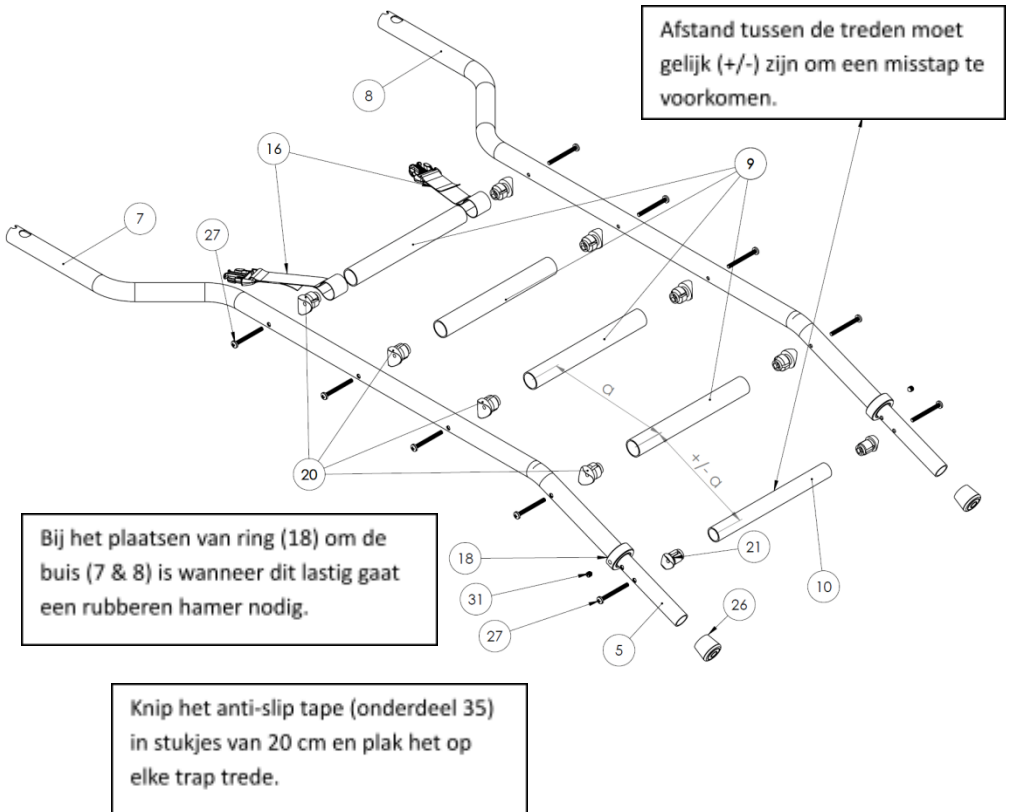
1: Assemblage van de trap



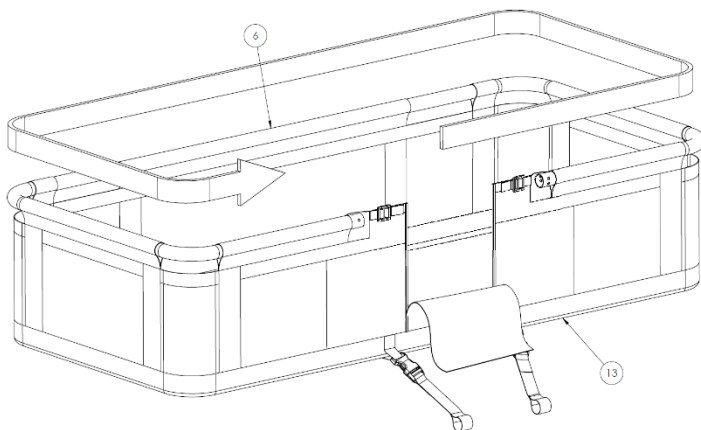
2: Schuif polyester hangbed om C-buis met de rits naar buiten.



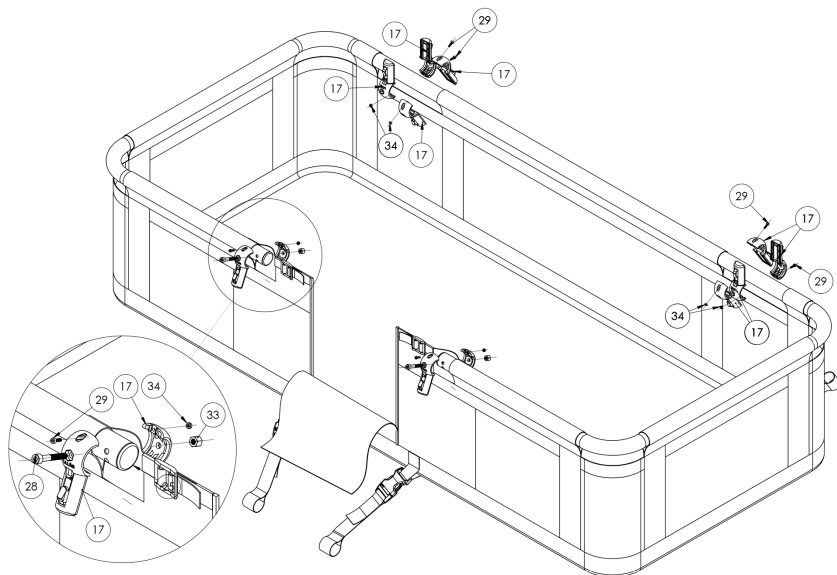
3: Monteer T-verbinders en afdichtdoppen



4: Assembleer steun achter

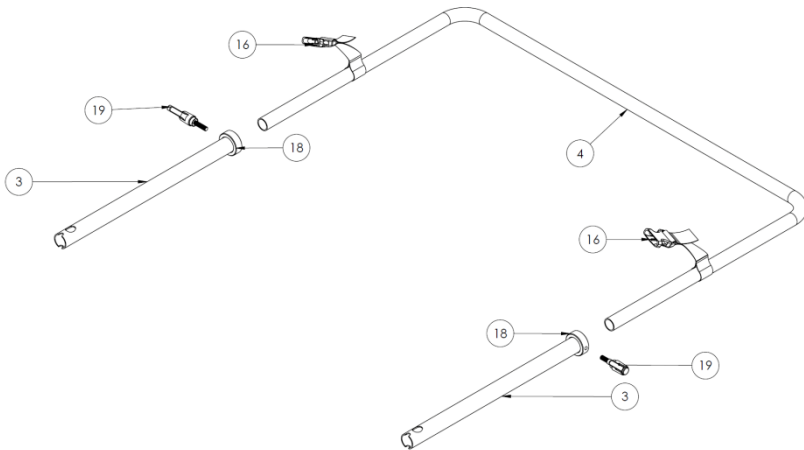



5: Assembleer kastverbinders

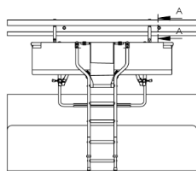


**A: Aanbevolen
voor normale en
grote caravans.**

**B: Aanbevolen
voor kleine
carvans**

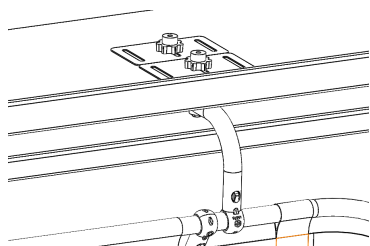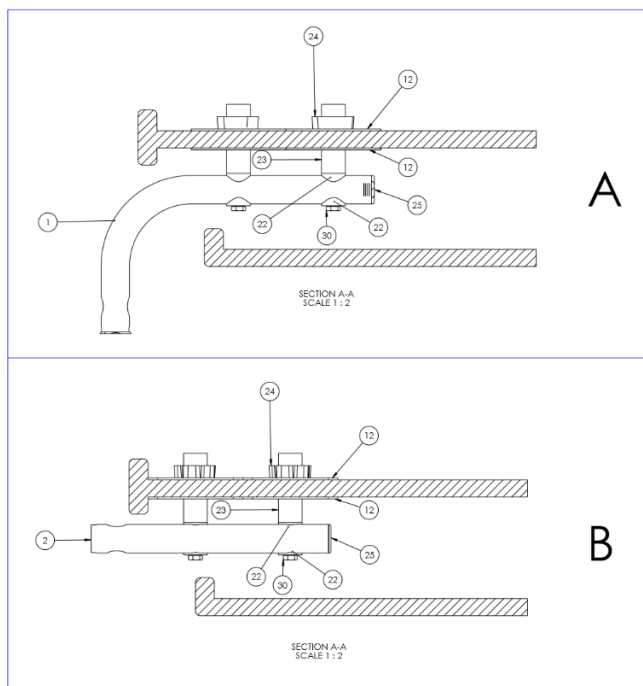*De afstandhouder
(onderdeel nr. 23) is niet in
elke caravan noodzakelijk.




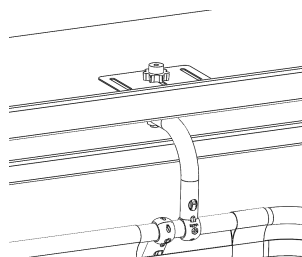Meest stabiele oplossing met 2
verbindingen.




Als je kast niet diep genoeg is kun je ook 1
verbinding gebruiken. Het caravanbed is
getest en gecertificeerd met 1 verbinding.

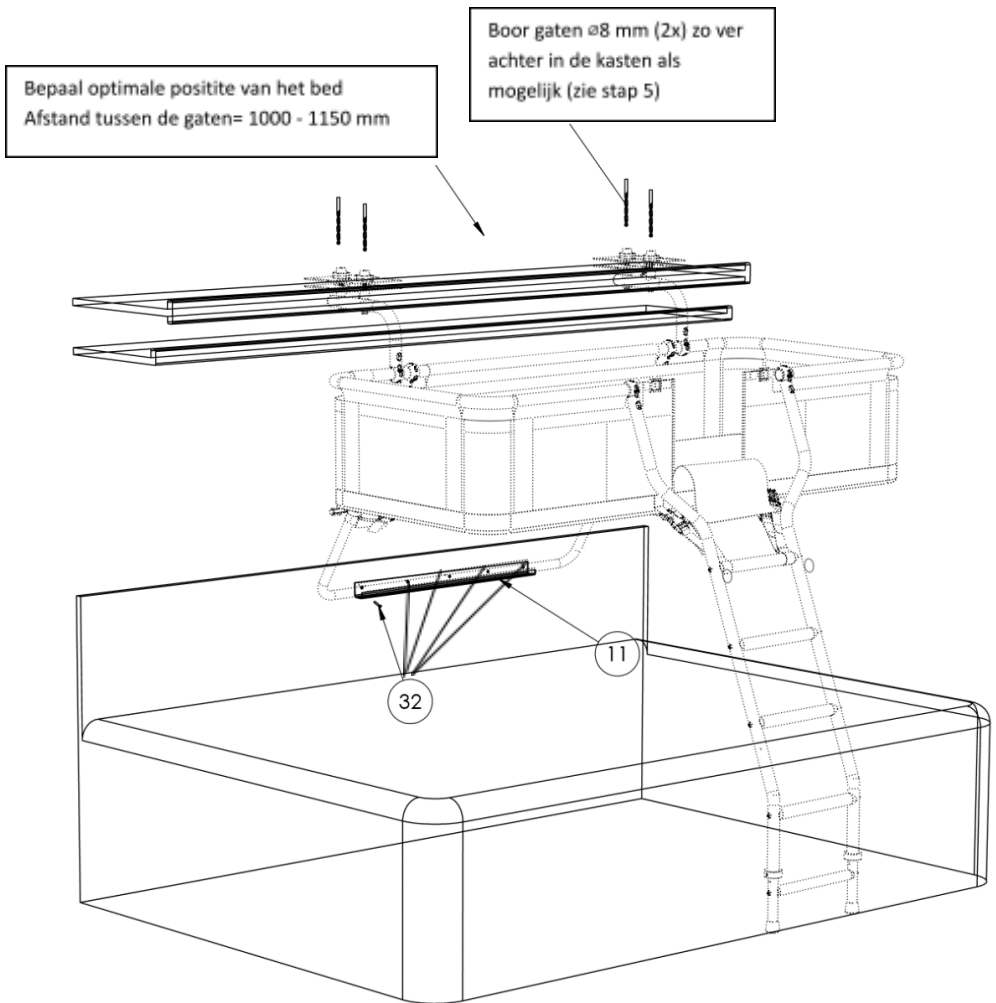6: Bepaal positie en boor gaten



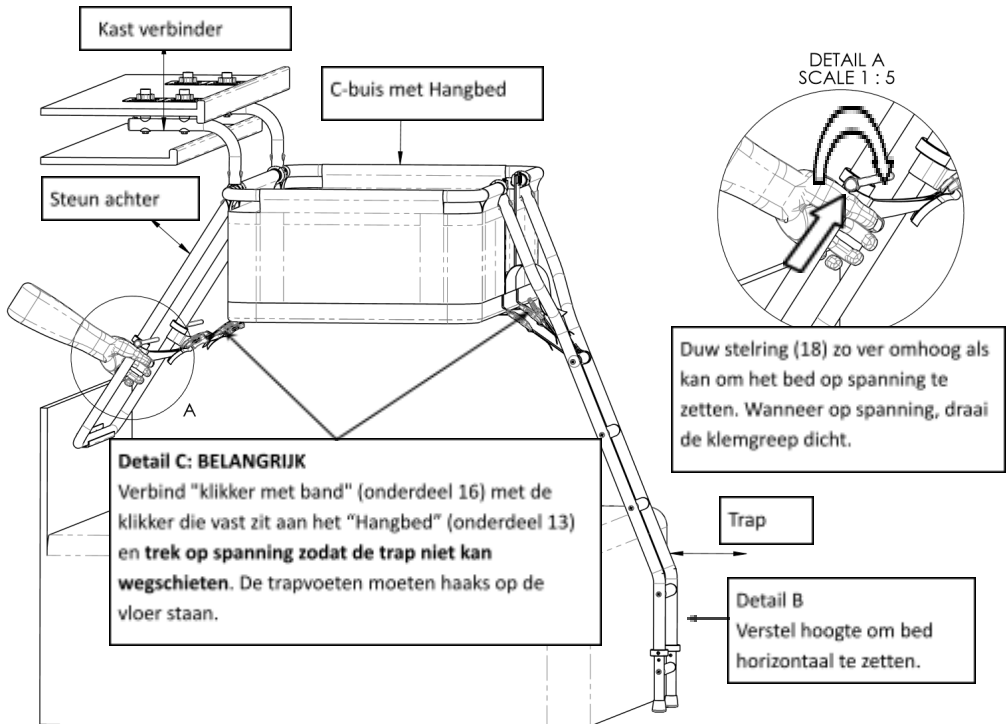7: Assembleer het bed en zet op spanning.



- Stap 1: Monteer de "Kast verbinders" in de kastjes van uw caravan
Stap 2: Monteer de "steun achter" met de "C-buis met hangbed"
Stap 3: Verbind de "C-buis met hangbed" met de "Kast verbinders"
Stap 4: Plaats de "Steun achter" op het L-profiel (Onderdeel 11)
Stap 5: Duw aan beide kanten de stelling omhoog zoals beschreven in Detail A op deze pagina.
Stap 6: Verbind de "Trap" met de "C-buis met Hangbed" (Beide buizen tegelijk)
Stap 7: Plaats de "Matras onderlegger" (15) in het hangbed en de "Matras" (14) hier bovenop.
Stap 8: Plaats het bed horizontaal zodat de trapvoeten haaks op de vloer staan. (Detail B)
Stap 9: Verbind de "Klikker met band" (16) zoals beschreven in Detail C. BELANGRIJK
Stap 10: Plak "Sticker 1" (36) op de bovenste traptrede.
Stap 11: Plak "Sticker 2" (37) op de "U-buis" (4).

Belangrijk

Het totale gewicht moet verdeeld worden over de trap en de steun achter, wees er dus zeker van dat de kast verbinders geen verticale kracht ontvangen.

